



Pitching Instructions Pop DLX

Pop-Up Pitching

- Remove tent from the bag and carefully remove the attached elastic strap.
- The tent will now be free to pop open.
- Position the tent in the required direction then peg out the rear corners of the flysheet. Pull the two front pegging points forward so that the groundsheet is taut, then peg.
- Peg out all guy lines using the pin-pegs supplied, ensuring that the guy line attachment points are evenly tensioned.
- Attach the inner to the top of the flysheet using the elasticated toggles.



To Pack

