

PITCH THE OUTER TENT FIRST

1. Take the spring-connected poles (x8) and the shock-corded fibreglass poles (x4) and assemble them separately making sure all the sections are fully located. Each type of pole is of equal length. Once assembled, lay poles on the ground (Fig 2 - showing steel-fibreglass connection).
2. Open out the flysheet and lay carefully on the ground. Insert the poles (A, B, C, D - Fig 1) into the four pole sleeves on the outside of the flysheet (Fig 1 & 4) ensuring the pre-shaped corner (steel) section lines up with the pole sleeve cut out (Fig 3).
3. Locate one end of each pole onto corresponding metal pin (Fig 5). Push poles (A, B, C, D - Fig 1) into an arch on the opposite side, one at a time, and locate pole ends onto metal pins (Fig 5). Ensure the clips on the black webbing straps are undone.
4. Peg the rear of the tent through the pegging points. Always drive the peg into the ground at a forty five degree angle to obtain best grip.
5. Take hold of the front of the tent, lifting and dragging the flysheet into an upright position away from the pegged out rear. Peg out the front when the fabric panels between the poles are taught.
6. Insert each of the alloy tube poles through the arch cut out at the front of the flysheet and locate the flat end into the webbing pocket at the rear of the flysheet. Extend telescopic section into the pocket at the front to ensure fabric is taught (Fig 7).
7. It may now be necessary to straighten the line of the poles down each side of the flysheet. Once straight peg through metal rings (Fig 8).
8. Peg out all the guylines. Those on the front sleeve should be pegged in front of the tent and those at the rear sleeve behind.
9. Peg out all remaining pegging points.

Fig 1

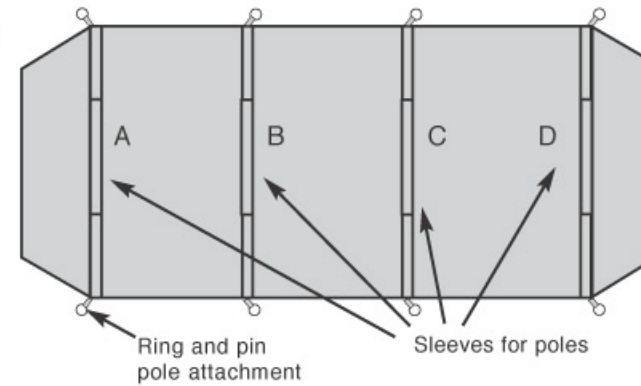


Fig 2



Fig 3

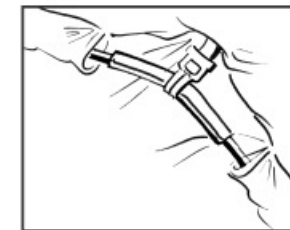


Fig 4

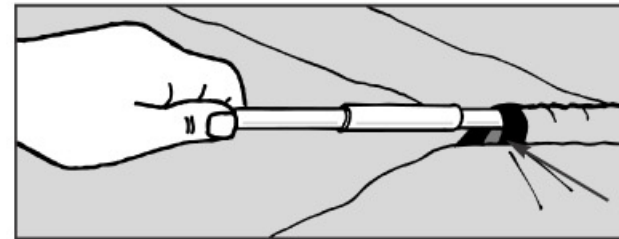


Fig 5

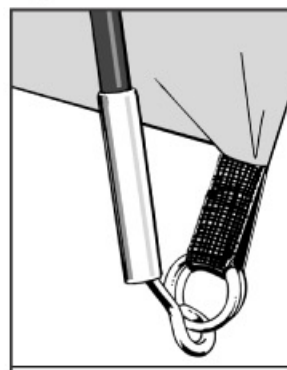


Fig 6

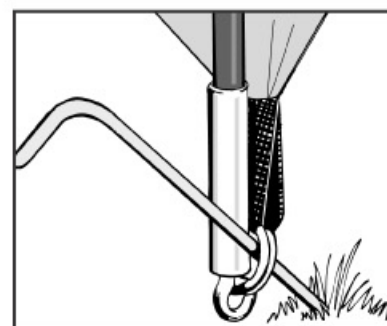


Fig 7



FIXING THE INNER TENTS

1. Place the inner tent inside the rear of the flysheet. Peg out the rear corners.
2. Attach the inner to the flysheet by means of the toggles and rings. It is best to attach the rear of the inner first by opening the inner door and standing on the groundsheet (Fig 8,9).
3. Attach inner dividing curtain if required.
4. Attach porch groundsheet using remaining pegs.

Fig 8



Fig 9

